

(Your account will be charged for 1 Trak)
Use this procedure for the other Geo Fences. Please note that Geo Fences 1-3 are set to alert you when the vehicle leaves or exits this perimeter. Geo Fences 4-6 are set to alert you when the vehicle enters or drives into your selected perimeter.

If you would like to cancel or turn off the Geo Fence, simply select Clear Geo Fence. (Your account will be charged for 1 Trak)

Note: Every time that you Set or Clear a Geo Fence your account will be charged for 1 Trak.

Device Settings: (Alerts)

You will need to set the alerts up for each Geo Fence setting, Max Speed, and Alarm.

To set up a Text Message

Alert (this will send your cell phone a text message when the Geo Fence, Max Speed if

each violation.

History

When you select history button on the Main Control Panel, it will show up to 500 commands, alerts, and settings that you have requested. You can select the Map it button to review any of those items that have been stored into your history account. There is no Trak charge to review any of your history items. The History account only stores requested commands, alerts and settings that you have requested.



Interactive Vehicle Systems

Cerritos, CA 90703
www.cybertraklocate.com

Alarm violation has occurred.
Select the box By Text Message?

Enter your cell phone number (area code and 7 digit number); Select your wireless carrier from the pull down tab. Select UPDATE (You may use 2 different text messages for each alert)

To set up an email alert (this will send your selected email address a notification when a Geo Fence or Max Speed violation has occurred.

Select the box By Email?

Enter your email address or addresses that you would like to be notified at when your vehicle has violated a Geo Fence or Max Speed Alert.
Select UPDATE.

When you have an alert either from a Geo Fence violation, a Max Speed Violation or from an Alarm alert your account will be charged 1 trak for

WARRANTY

CyberTrak™ a division of DLC, Inc. warrants to the original purchaser that the vehicle alarm system purchased will be free from defects in workmanship for 12 months from the original date of purchase.

If it is determined that a defect exists, at our option, we will repair defective parts or replace the system. If product is

defective within one (1) year from date of purchase, item will be repaired or replaced at no cost to original purchaser.

Proof of purchase by the original owner must accompany Warranty request before service is rendered.

This Warranty covers normal use. It does not cover damage from alteration, misuse, abuse, accident, improper installation or maintenance, nor does it cover costs associated with removal and



Congratulations on owning the most advanced product of its kind. Your CyberTrak interactive system allows you to manage and protect one of your most valuable assets—YOUR VEHICLE!
Go to CyberTrak's home page at: www.cybertraklocate.com
Select CyberTrak Login button (upper right hand of page)

Select GSM G3 unit login

Note if you have not registered, select SET UP AN ACCOUNT.

You will need to have the **serial number** to begin the registration procedure.

The Serial number can be located in one of 3 places:

1. On the VLU module
2. On the side of the box
3. On this User Guide (see label on this page).

Commands:

When commands have been completed a map will appear with the location and vehicle information.

To Locate Vehicle: Select the Locate button (your account will be charged for 1 Trak)

To Set Max Speed Threshold: Use pull down tab to select a speed (75 mph/85 mph) Select: Set Max Speed (Your account will be charged for 1 Trak)

To Disable Max Speed Threshold Feature: Use pull down tab to select Disable, Select: Set Max Speed (Your account will be charged for 1 Trak)

To Disable Starter: Select Starter Disable (if the vehicle is moving it will not allow the vehicle to start after the vehicle has stopped and the ignition is turned off) (Your account will be charged for 1 Trak)

To Enable Starter: Select Starter Enable this will now allow vehicle to start. (Your account will be charged for 1 Trak)

Geo Fences:

There are 6 total Geo Fences

that can be used. 3 Geofences when exiting a user determined area (Geo Fences 1-3), and 3 when entering a selected area (Geo Fences 4-6).

To Set Geo Fence #1 (Outside Geo Fence, when vehicle is leaving the Geo Fence area)

Select Preview

Type in the Address that you would like to set the Geo Fence around.

Use the pull down tab to either select a perimeter size, or select OTHER and type in the size of the Geo Fence that you would like.

Select: Preview. A map will appear showing the Geo Fence that you have selected. If you wish to change the Geo Fence Size do so at this time. A second map will appear with the new Geo Fence Size. If you wish to select this Geo Fence, select: SET GEO FENCE #1.

USER GUIDE

Barcode Label